Soigeneris

G540 Passive Heat Sink Installation

Installation Manual V1.0




Thanks for purchasing the Soigeneris G540 Passive Heat-sink Kit. The kit contains three heat-sink modules and one strip of high performance heat-sink tape. You may notice that the tape is slightly smaller than the heat-sink modules, having a slight gap around the perimeter of the installed heat-sink actually increases the heat transfer.

Follow along with installation instruction below and you'll have your heat-sink installed in just a few minutes.



First, clean the back of your G540 with isopropyl alcohol and a small rag. Take care that no lint gets stuck to the ends of the screws.

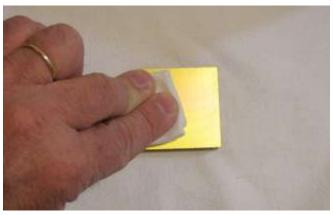

Second, clean the back of the heatsink modules with isopropyl alcohol as well.

Important: Make sure both the G540 and heat-sink modules are dry before proceeding.







Third, peel the protective layer of one side of the tape and carefully apply as shown.



Fourth, don't peel off the second protective layer of tape yet. First do a test fit, get the heat-sink modules centered and make an alignment mark on one side.



Fifth, peel of the second protective layer on the tape and stick down the heat-sink modules. After getting them in place press them down really hard to fully seat the tape.

You're done! Now enjoy a cooler running G540.